


SHAD

HODA FORZA 750 / X - ADV 750 '21

TOP MASTER H0FZ71ST

BCN

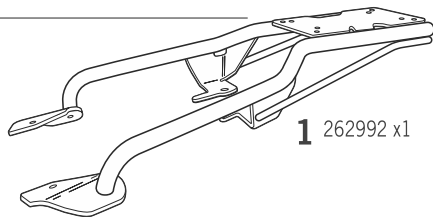

1 262992 x1



2 304039 x4
M8 x 40
Din 7380



3 303045 x6
Ø8



4 260740 x2
Ø20 Ø11 x 11



5 260648 x4
Ø16 Ø9 x 5

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.




E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system or 4p system before the top master.

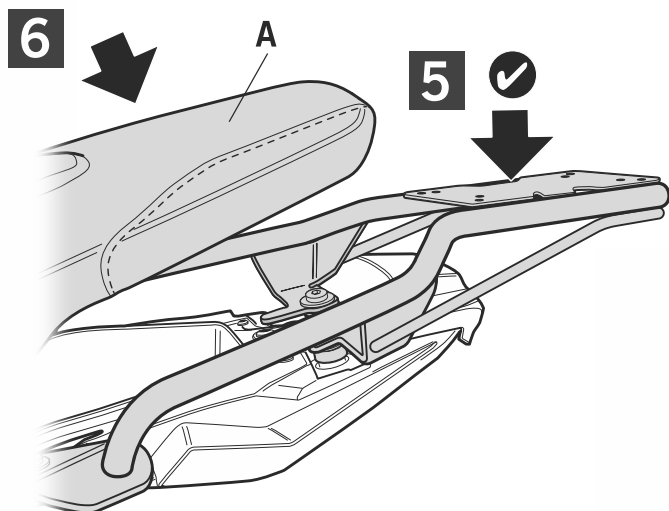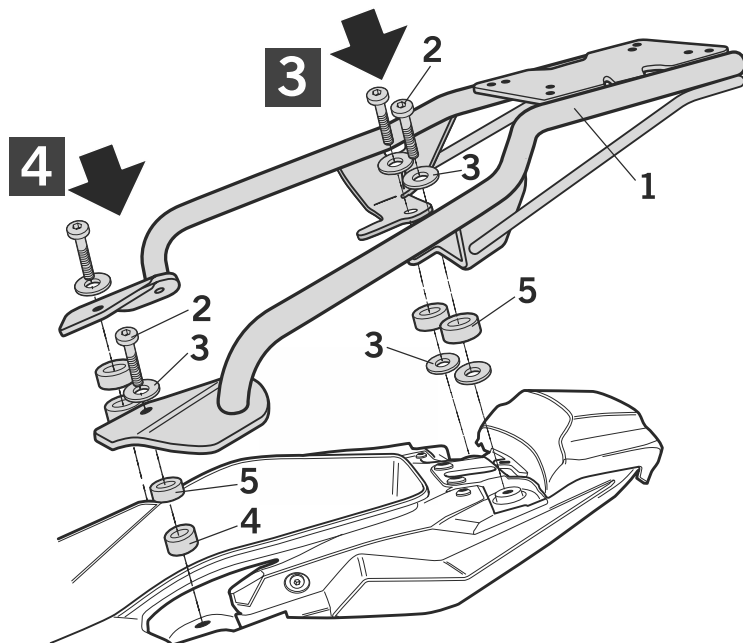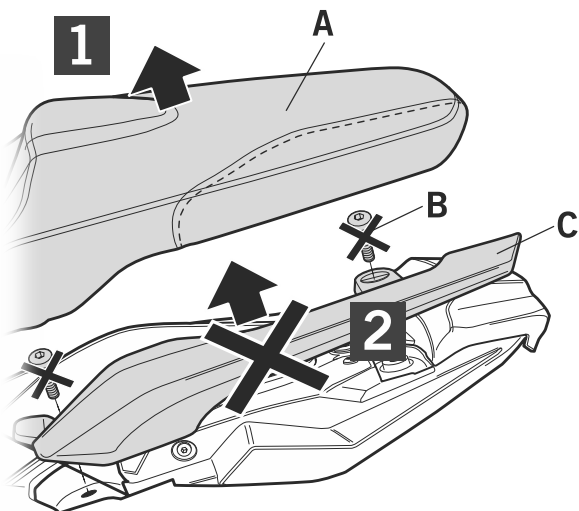

TOP MASTER
+
3P SYSTEM
or 4P SYSTEM

