


# SHAD

BMW S1000XR '15  
WOSX15iF

3P  
SYSTEM

DESIGNED IN  
BARCELONA

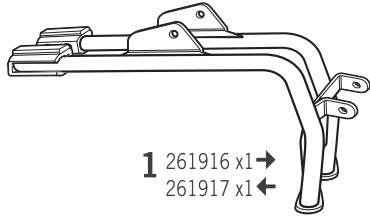

1 261916 x1 →  
261917 x1 ←



2 261041 x2  
Ø16 Ø9 x 18



3 303045 x6  
Ø8



4 304172 x2  
M8 x 70 Din 7380



5 304028 x2  
M8 x 25 Din 7380

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

