


# SHAD

## PULSAR NS 200 '14 KIT TOP PONS24ST



1 261753 x1 →  
261754 x1 ←

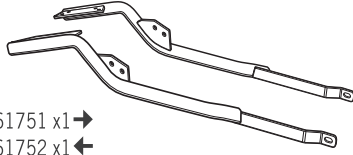

2 261751 x1 →  
261752 x1 ←



3 303020 x12  
Ø8



4 304272 x4  
M8 x 35 Din 7380



5 260731 x4  
Ø16 Ø11 x 10



6 304081 x4  
M8 x 20 DIN 7380



7 302024 x4  
M8

### ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

